

# Botron B5000 Technical Data Sheet



## Features:

The B5000 has three digit LED and soft touch keypad for easy programming as well as digital auto advance and an electric eye cut sensor. Full manual controls are also an option. Available cut lengths of 1/16" up to 39". Unit can handle multiple styles of tape and widths from .28" to 2" with any size cores.

## Product Notes and Features

- LED Display
- Steel Blades
- Manual Override
- Auto Pressure Adjustable
- Photocell Control

## PROPERTIES

## SPECIFICATIONS

Cutting Length:	5mm - 999mm
Tape Width:	7mm - 50mm
Core Size:	Any size
Accuracy:	+/- .04 (1mm)
LED Display:	3 digits
Power Requirement	
V:	AC 110V, 220V
Hz:	50/60Hz
W:	35W
Dimensions:	5.4" x 8.5" x 6"
Weight:	6.6lbs

## PART NUMBERS

B5000 Automated Tape Dispenser



## BEFORE YOU START

1. When loading the tape, make sure the ON/OFF switch is in the OFF position.
2. While operating the B5000 be careful not to put fingers inside where blade cuts tape. The blade is very sharp and will cause injury if fingers are placed inside.
3. When there are finger marks, oils and/or dirt on the dispenser, the tape will not stick properly. Use a dry cloth to clean.  
Note: For more thorough cleaning, wipe the dispenser with alcohol. (Never clean with thinner.)
4. To avoid shortening the life of the motor, run the B5000 without tape as little as possible.
5. This is an industrial tape dispenser. It is not for home use. Do not use around children.
6. The B5000 can be used efficiently by one or two operators. Allow the motor to rest from time to time.

## OPERATION

1. Turn power switch to "ON" position.
2. Load preferred tape into back of machine. Adjust tape holder to appropriate size.
3. Open tape pressure cover.
4. Feed tape carefully into rollers using the FWD button.
5. Close pressure cover.
6. Set desired length on control panel and choose auto or manual for dispensing tape.
7. Press start.