

Botron B8775G Technical Data Sheet



Features:

StatCare Static Dissipative Floor paint is designed to dissipate static charges and stop static generation. It will provide a durable, UL approved, slip resistant finish and can be applied on sealed concrete. It's water-based epoxy/acrylate formula is extremely resistant to chemicals and solvents. Our ESD Floor Paint is superior to and will outlast latex and urethane floor paints.


PROPERTIES

SPECIFICATIONS

Color:	Grey, Light Grey, Beige
Solids:	32% +/- 1%
Resistivity-ASTM D257:	108-9 Ohms ² Max/Cm ² @ 40% Relative Humidity
Weight Per Gallon:	8.1 – 8.35
Hardness:	30 / Sward
Viscosity:	H-J / Gardner
Solvents:	Water-glycol
Flash Point:	140 0 F minimum
Dry Time:	Dry to touch 5-7 hours
Open for traffic:	10-12
Water Resistant:	8 hours - No effect
Alcohol:	1 hour - No effect
Gasoline:	8 hours - No effect
Caustic 5%:	2 hours - No effect
Soap Resistance:	8 hours - No effect
Slip Resistance:	Exceeds UL Requirements
Coverage:	400 – 600 Ft. 2 /Gallon
Odor:	Moderate (Glycol Ether, Alcohol)

Product Notes and Features

- Available in 3 colors
- Dry to touch in 5-7 hours
- Open for traffic in 10-12
- Long lasting
- Water-based epoxy/acrylate
- Lead-free RoHS compliant

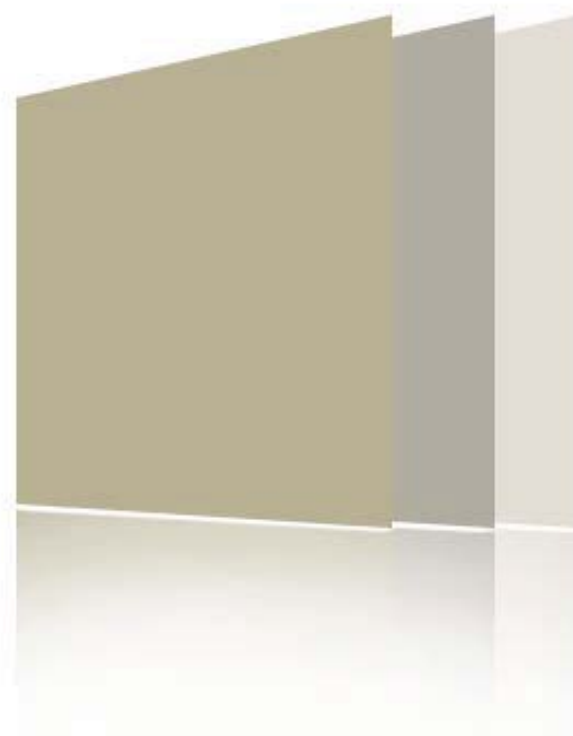

Botron Company Inc. | 325 W. Melinda Ln Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

Disclaimer. All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.

APPLICATIONS

Coverage is 400 – 600 Sq Ft per gallon
2 coats needed for maximum effectiveness
5 to 7 hours time between coats
Complete curing with maximum durability and chemical resistance will take 5-7 days.

PART NUMBERS

B8771G Gray Floor paint 1 gallon
B8775G Gray Floor paint 5 gallon

B8771LG Light Gray Floor paint 1 gallon
B8775LG Light Gray Floor paint 5 gallon

B8771B Beige Floor paint 1 gallon
B8775B Beige Floor paint 5 gallon

GROUNDING

Using heel grounders with this StatCare floor paint gives your staff the freedom to move around the work area performing an ESD function.

Botron Company Inc. | 325 W. Melinda Ln Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

Disclaimer. All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user.

The statements herein shall have no force or effect.