

# Adhesive Rollers



## Film Adhesive Rollers

Product No.	Description
CRP0440-3R	3", White or Blue
CRP0440-9R	9", White or Blue
CRP0440-18R	18", White or Blue

Each Roll is individually poly wrapped and sealed.



## Adjustable Head

Product No.	Description
CRP0443	fits 9" & 18" Roll

Shown Here With Extension CRP0550



## Foam Adhesive Rollers

Product No.	Description
CRP0445-3R	3", White
CRP0445-9R	9", White
CRP0445-18R	18", White

Each Roll is individually poly wrapped and sealed.



## Extensions

Product No.	Description
CRP0550-1/2	1-2ft Extension
CRP0550-2/4	3-4ft Extension
CRP0550-4/8	4-8ft Extension
CRP0550-6/12	6-12ft Extension



## Standard Handle

Product No.	Description
CRP0441	10"H - fits 3" Roll
CRP0442	10"H - fits 9" Roll

**Additional**  **Items Include:**


### StepOne Adhesive Mats

CRP0430-1, 18"x36"	CRP0430-6, 36"x45"
CRP0430-2, 18"x45"	CRP0430-7, 36"x60"
CRP0430-3, 24"x36"	CRP0430-8, 26"x45"
CRP0430-4, 24"x45"	CRP0430-9, 36"x72"
CRP0430-5, 36"x36"	CRP0430-10, 40"x48"

### Cleanroom Tape

CRP0790- 1/2, 1/2" width	CRP0790- 2, 2" width
CRP0790- 1, 1" width	

Distributed By:

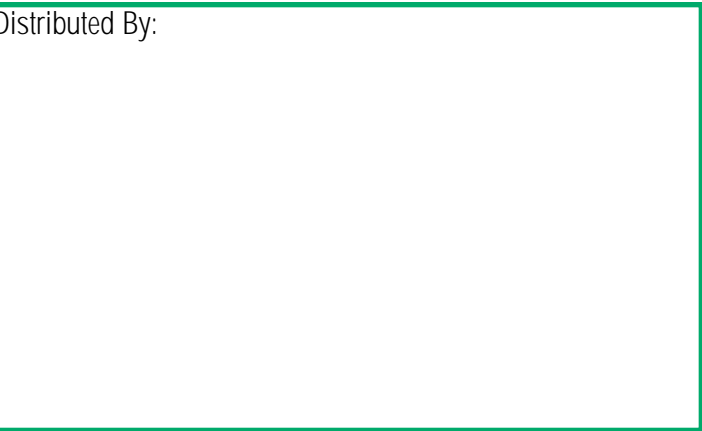

# Adhesive Rollers



**Applications:** Cleanroom, microelectronics, medical, printing, general maintenance.



## Adhesive Rollers

The maintenance of a critical environment requires a variety of consistent quality products to meet your cleaning needs. That is why our **Adhesive Rollers** come in various textures, sizes, and colors.

**CleanRoll Film Rollers** are made of thin polyethylene sheets around a 1 ½" core. There are 118 smooth sheets per roll. These rollers are ideal for removing dust particles from smooth surfaces including floors, walls, ceilings, and workstations. Available in blue or white, 3", 9" or 18" lengths.

**CleanRoll Foam Rollers** are made of non-woven PET fabric sheets around a 1 ½" core. There are 57 cushioned sheets per roll. These rollers work well for cleaning textured surfaces. Available in white only in 3", 9" and 18" lengths.

**Handles** are available in a variety of styles and combinations to customize for your specific use. These sturdy handles are lightweight for comfortable use and can be dis-assembled for easy storage.

## Specifications

### **Adhesive Strength**

Film Roller ..... 160 g/25mm  $\pm$  10  
Foam Roller ..... 400 g/25mm  $\pm$  50

### **Tensile Strength**

Film Roller..... More Than 1.2kg/10mm  
Foam Roller ..... More Than 1.2kg/10mm

### **Core Size**

Film Roller ..... 1 ½"  
Foam Roller ..... 1 ½"

### **Sheets**

Film Roller ..... 118  
Foam Roller ..... 57

\*Specifications subject to change without notice